



RADON TEST KIT

Duplicate Test Instructions



IMPORTANT:
Enter your start
and end dates
online to receive
your results.

www.HomeRadonTest.ca

The alpha track detector in this kit is analyzed by SRC Environmental Analytical Laboratories, an independent laboratory accredited by the Canadian Association of Laboratory Accreditation and certified by the Canadian National Radon Proficiency Program.



CALA
Testing
Accreditation No. A2472



START YOUR TEST

Please read through all the instructions before starting your test.

- 1** The detectors do not require batteries or lid removal. Open both envelopes and remove the detectors. The detectors are now on. Place them side by side in your chosen location - see placement guide.
.....
- 2** Activate one of the detectors and the start date online at www.HomeRadonTest.ca. The detector number is located on the foil bag and on top of the detector.
.....
- 3** Save the box, mailing label and resealable foil bag that came with your kit.



The ideal time to test your home is for a minimum of 3 months, from September to March when windows and doors are most often closed. If you start your test in April to August, we recommend extending your test period (no more than 12 months).


You have received a duplicate radon test, which is a quality control measure. *Both detectors* must be used in this test and placed in the *same location* for the *same length of time*. Once the test is complete, mail both detectors in the same foil bag. Your test result will be an average of both detectors. You will receive one result.

END YOUR TEST

- 1** To receive your radon results, you must enter the **end date** for your test online at www.HomeRadonTest.ca
.....



- 2** Place both detectors in the resealable foil bag provided. Place in shipping box.
.....

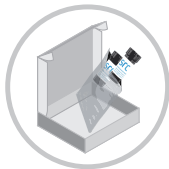

- 3** Place the postage sticker on top of the box and seal the box with heavy-duty tape.
.....



- 4** Mail your radon kit to the lab **as soon as possible.**
.....



Results will be emailed to the address specified in the online registration form.

Contact Us: Our experts are here to help and answer any questions you have about your radon test.
radon@lungsask.ca

LOCATION: PLACEMENT GUIDE

Health Canada's guidelines indicate that measurements are best made in the *lowest lived-in level* of a home.

This space should be occupied for **at least four hours** per day.

Test results can be affected by:

- Humidity (bathroom, kitchen)
- Ventilation/exhaust (sump, laundry, garage)
- Heat (baseboard heaters, electronics or direct sunlight)

Approximate detector placement

- 1 metre (3 feet) from any exterior doors or windows
- 0.5 metre (2 feet) from exterior walls
- 1 metre (3 feet) off the floor

BEST LOCATIONS:

Basement or main floor bedroom, living room, office or family room

DO NOT
place your detectors
in or near a bathroom,
kitchen, closet,
laundry/mechanical
room or garage.

